



Accessory Fitting Instructions

Thank you for choosing this Triumph genuine accessory kit. This accessory kit is the product of Triumph's use of proven engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.

Completely read all of these instructions before commencing the installation of the accessory kit in order to become thoroughly familiar with the kit's features and the installation process.

These instructions should be considered a permanent part of your accessory kit, and should remain with it even if your accessory equipped motorcycle is subsequently sold.

Backrest Pad, Top Box, Kit	
Kit Number	Models
A9500909	Tiger Sport from VIN AU7774, Tiger Sport 660, Tiger Sport 800

Parts supplied



1. Backrest pad, top	1 off	3. Cleaning wipe (not shown)	1 off
2. Backrest pad, bottom	1 off		

⚠ WARNING

Fit only genuine Triumph accessories to those models approved by Triumph as listed in the associated Triumph fitting instructions.

The accessory kits covered in this instruction are designed for use on specific models of Triumph motorcycle. The accessory kits and the models applicable are listed at the start of the instruction. They should never be fitted to any other Triumph model or to any other manufacturer's motorcycle.

Fitting an accessory kit to a Triumph model not listed, or to any other manufacturer's motorcycle, will affect the performance, stability and handling of the motorcycle.

Failure to follow the advice above may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

Always have Triumph approved parts, accessories and conversions fitted by a competent person with the specialist knowledge and technical understanding of motorcycles, such as an authorized Triumph dealer.

The fitment of parts, accessories and conversions by a person without the specialist knowledge and technical understanding of motorcycles may affect the handling, stability or other aspects of the motorcycle's operation.

Failure to follow the advice above may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

A torque wrench of known accurate calibration must be used when fitting this accessory kit.

Failure to tighten any of the fasteners to the correct torque specification may affect motorcycle performance, handling and stability.

Failure to follow the advice above may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

Make sure the motorcycle is stabilized and adequately supported.

Do not support the motorcycle on any ancillary component, the exhaust system or any other non structural parts of the motorcycle frame.

A correctly supported motorcycle will help prevent it from falling.

An unstable motorcycle may fall resulting in motorcycle damage, serious injury or death.

NOTICE

Triumph offers a broad range of approved genuine accessories for your motorcycle.

We cannot therefore cover all possible equipment variations in these instructions. For removal and installation of Triumph Genuine Accessories, always refer to the instructions supplied with the respective accessory kit.

To obtain additional copies of any Triumph accessory instructions, visit www.triumphinstructions.com or contact your authorized Triumph dealer.

1. If installed on the motorcycle, remove the top box as described in the top box accessory installation instructions.
2. Place the top box on a flat, clean and soft surface.

NOTICE

When installing self-adhesive parts care must be taken to make sure positioning is correct and accurate.

After the adhesive has been attached to the mounting surface, there is no satisfactory method to remove or reposition if incorrectly aligned.

Initial bonding is instant, full bonding is achieved after 72 hours.

NOTICE

The minimum application temperature for the adhesive is 50°F (10°C)

NOTICE

Care must be taken when working on the top box. Damage to the top box surfaces may result from inadequate care when installing the back rest pad.

NOTICE


Read the warning notices printed on the cleaning wipe packet in the installation kit

NOTICE

The surface which the back rest pad is fixed to must be clean and dry to make sure that the adhesive has a sound base to adhere to.


Use the cleaning wipe supplied for this purpose.

3. Use the cleaning wipe provided to clean the mounting area of the top box.

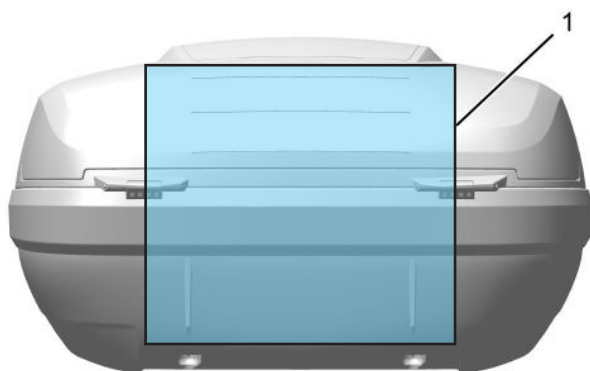


1. Mounting area

4. Collect the bottom backrest pad from the kit and peel away the two adhesive backing strips from the reverse of the pad.

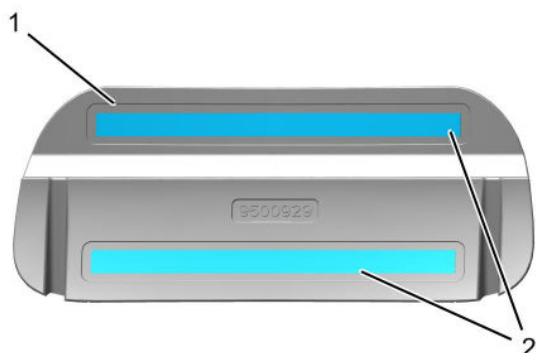


- 1. Backrest pad, bottom**
2. Adhesive backing strips

5. Carefully position the bottom backrest pad centrally, with the top edge of the pad aligned with the rim of the top box molding, as shown below.

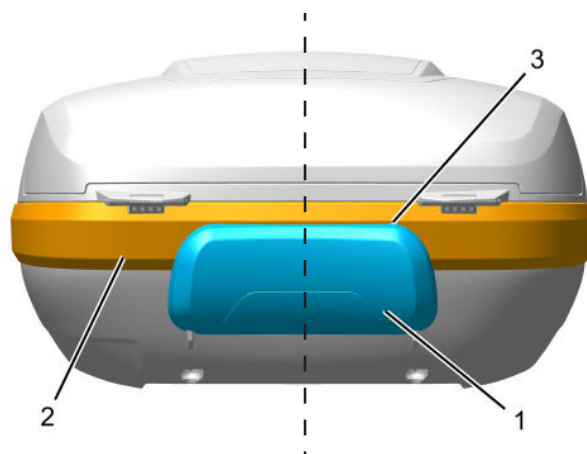

- 1. Backrest pad, bottom**
2. Top box molding
3. Pad alignment


6. Make sure the profile of the back rest pad is aligned with the profile of the top box molding rim, with the fins located in the grooves on the tank pad, as shown.

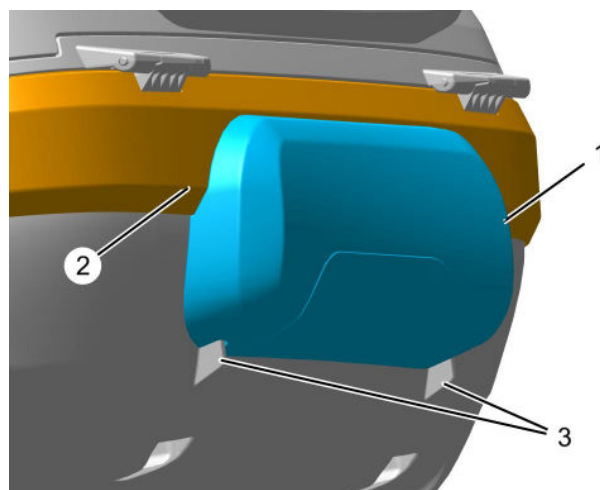

- 1. Backrest pad**
2. Top box molding rim
3. Top box fins

7. Apply firm and even hand pressure across the whole back rest pad surface for one minute to make sure a good bond is achieved.

8. Collect the top backrest pad from the kit and peel away the three adhesive backing strips from the reverse of the pad.

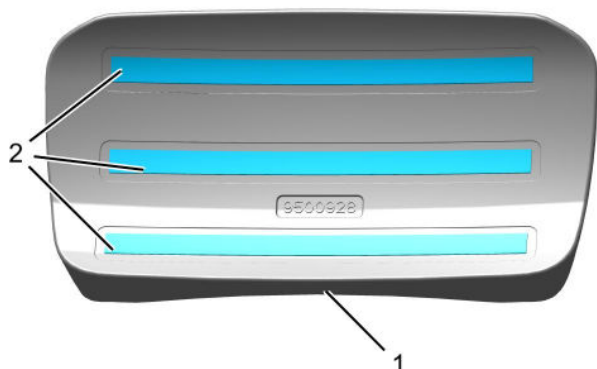


1. Backrest pad, top
2. Adhesive backing strips

NOTICE


When positioning the back rest pads make sure they are located centrally on the top box.

9. Carefully position the top backrest pad centrally, with the bottom edge of the pad aligned with the bottom edge of the top box infill panel.

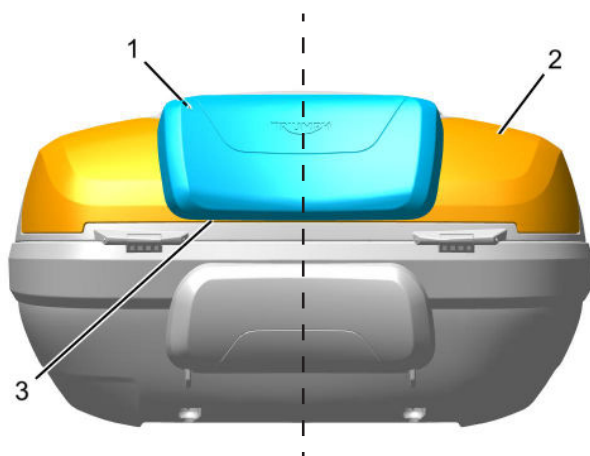

1. Backrest pad, top
2. Infill panel
3. Pad alignment

10. Make sure the profile of the back rest pad is aligned with the profile of the top box lid, as shown below.

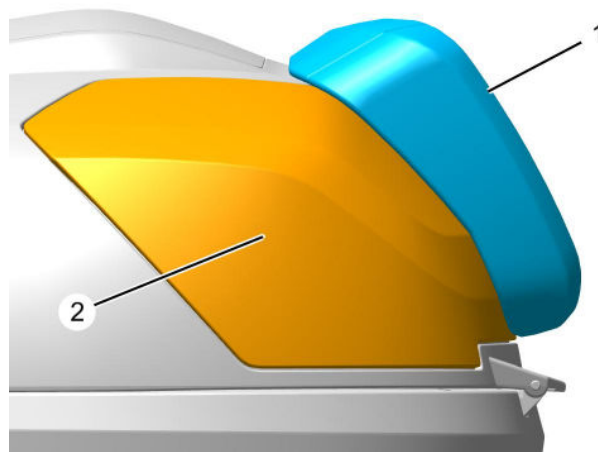

1. Backrest pad, top
2. Infill panel

11. Apply firm and even hand pressure across the whole back rest pad surface for one minute to make sure a good bond is achieved.

⚠ WARNING

After fitting the accessory kit the motorcycle will exhibit new handling characteristics.

Operate the motorcycle in a safe area free from traffic to gain familiarity with any new characteristics.

Operation of the motorcycle when not familiar with any new handling characteristics may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

If, after fitting this accessory kit, you have any doubt about the performance of any aspect of the motorcycle, contact a competent person with the specialist knowledge and technical understanding of motorcycles, such as an authorized Triumph dealer.

Riding a motorcycle when there is any doubt as to any aspect of the performance of the motorcycle may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

Never ride an accessory-equipped motorcycle at speeds above 80 mph (130 km/h).

Remember that the 80 mph (130 km/h) limit will be reduced by the fitting of non-approved accessories, incorrect loading, worn tires, overall motorcycle condition and poor road or weather conditions.

The presence of accessories will cause changes in the stability and handling of the motorcycle. Failure to allow for changes in motorcycle stability may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

High-speed operation should only be attempted by riders who have been instructed in the techniques necessary for high-speed riding and are familiar with the motorcycle's characteristics in all conditions.

Only operate this Triumph motorcycle at high speed in closed-course, on-road competition or on closed-course racetracks.

High-speed operation in any other circumstances is dangerous and may lead to loss of motorcycle control which could result in serious injury or death.

NOTICE

The motorcycle must not be operated above the legal road speed limit except in closed-course conditions.