



Accessory Fitting Instructions


Thank you for choosing this Triumph genuine accessory kit. This accessory kit is the product of Triumph's use of proven engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.

Completely read all of these instructions before commencing the installation of the accessory kit in order to become thoroughly familiar with the kit's features and the installation process.

These instructions should be considered a permanent part of your accessory kit, and should remain with it even if your accessory equipped motorcycle is subsequently sold.

Fork Protector Kit	
Kit Number	Models
A9640205, A9648075, A9648076	Daytona 660, Street Triple S, Street Triple S 40.3 cu in (660cc), Street Triple R from VIN 982752, Street Triple RS from VIN 966534, Trident from VIN AC6898, Tiger Sport from VIN AU7774, Tiger Sport 800

Parts supplied

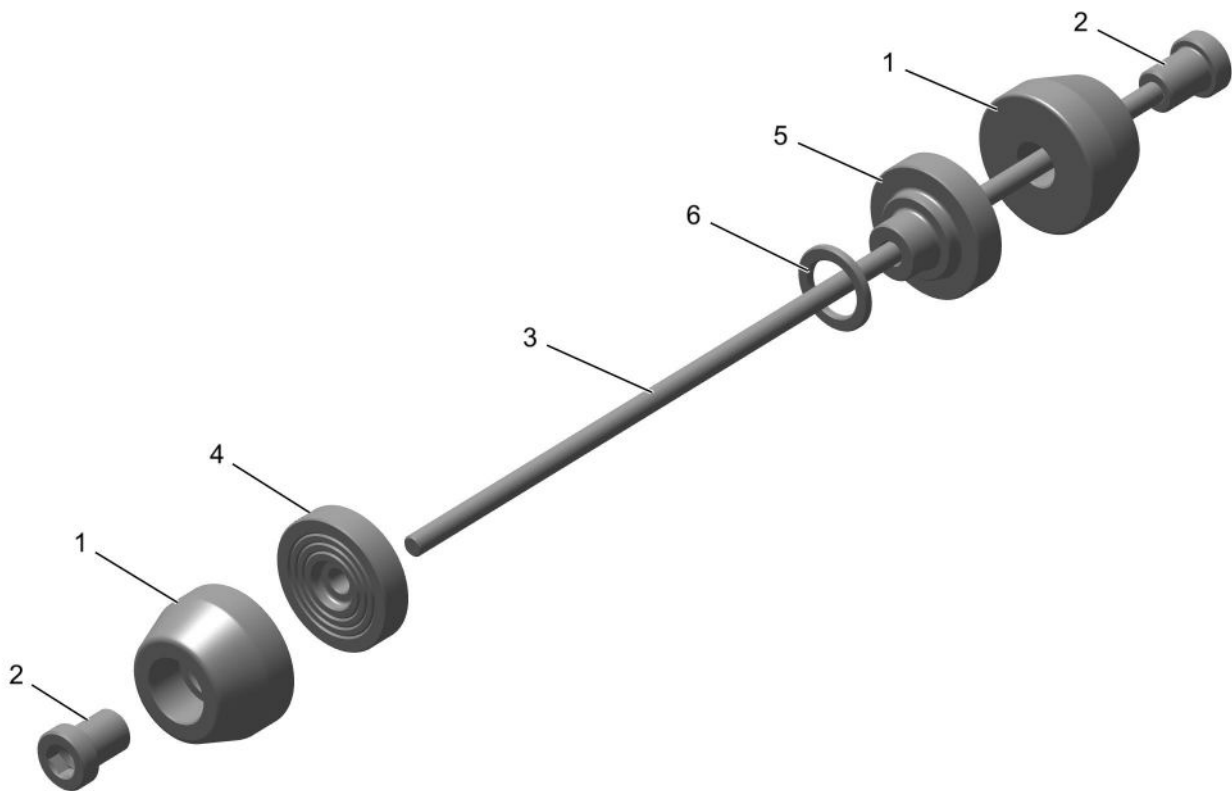

1. Protector	2 off	4. Sleeve, smaller diameter spigot	1 off
2. End cap	2 off	5. Sleeve, larger diameter spigot	1 off
3. Rod	1 off	6. Spacer	1 off

⚠ WARNING

Fit only genuine Triumph accessories to those models approved by Triumph as listed in the associated Triumph fitting instructions.

The accessory kits covered in this instruction are designed for use on specific models of Triumph motorcycle. The accessory kits and the models applicable are listed at the start of the instruction. They should never be fitted to any other Triumph model or to any other manufacturer's motorcycle.

Fitting an accessory kit to a Triumph model not listed, or to any other manufacturer's motorcycle, will affect the performance, stability and handling of the motorcycle.

Failure to follow the advice above may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

Always have Triumph approved parts, accessories and conversions fitted by a competent person with the specialist knowledge and technical understanding of motorcycles, such as an authorized Triumph dealer.

The fitment of parts, accessories and conversions by a person without the specialist knowledge and technical understanding of motorcycles may affect the handling, stability or other aspects of the motorcycle's operation.

Failure to follow the advice above may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

A torque wrench of known accurate calibration must be used when fitting this accessory kit.

Failure to tighten any of the fasteners to the correct torque specification may affect motorcycle performance, handling and stability.

Failure to follow the advice above may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

Make sure the motorcycle is stabilized and adequately supported.

Do not support the motorcycle on any ancillary component, the exhaust system or any other non structural parts of the motorcycle frame.

A correctly supported motorcycle will help prevent it from falling.

An unstable motorcycle may fall resulting in motorcycle damage, serious injury or death.

NOTICE

Triumph offers a broad range of approved genuine accessories for your motorcycle.

We cannot therefore cover all possible equipment variations in these instructions. For removal and installation of Triumph Genuine Accessories, always refer to the instructions supplied with the respective accessory kit.


To obtain additional copies of any Triumph accessory instructions, visit www.triumphinstructions.com or contact your authorized Triumph dealer.

NOTICE

One of the end caps is factory installed, do not attempt to remove the fixed end cap from the rod.


The fork protector with the fixed end cap is installed from the right hand side of the motorcycle.

1. Collect the fork protector assembly from the kit.
2. Remove the loose end cap, protector and sleeve with the smaller diameter spigot from the fork protector assembly.

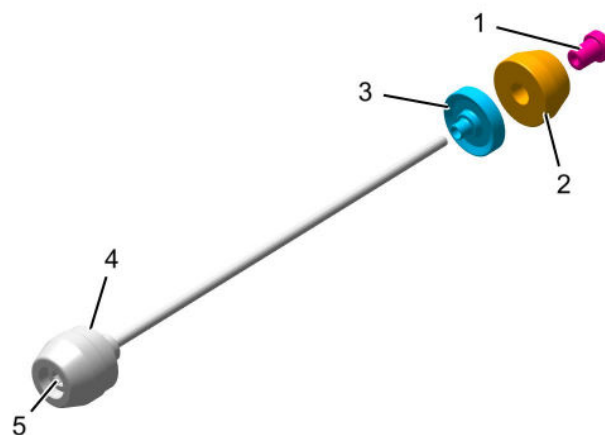


1. End cap, loose
2. Fork protector, loose
3. Sleeve, smaller diameter spigot
4. Sleeve, larger diameter spigot
5. End cap, fixed

3. Hold the protector and sleeve with the larger diameter spigot and spacer. Slide the rod into the front wheel spindle from the right hand side, as shown below.

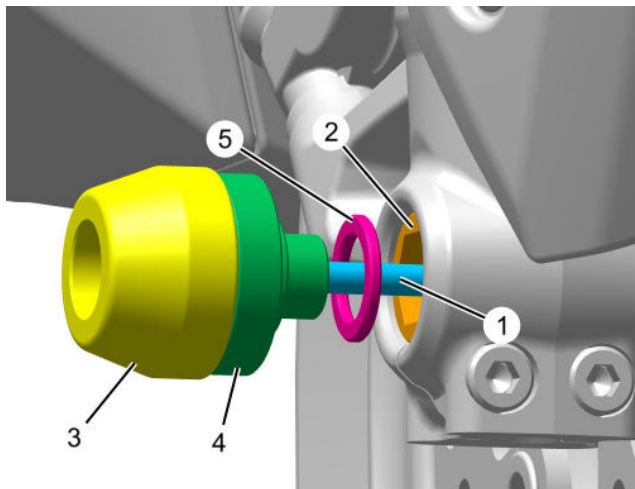

1. Rod
2. Front wheel spindle
3. Protector
4. Sleeve, larger diameter spigot
5. Spacer


4. Make sure that the spacer is located on the sleeve spigot.
5. When fully inserted, make sure the sleeve spigot locates correctly in the hexagon section of the front wheel spindle.

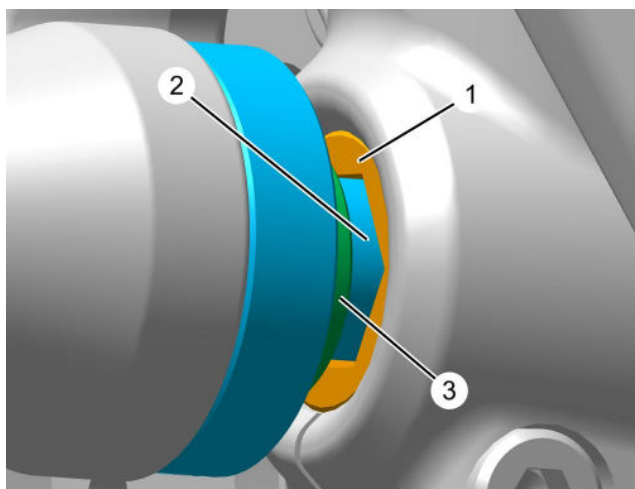

1. Front wheel spindle, hexagon section
2. Sleeve spigot
3. Spacer

6. Install the sleeve with the smaller diameter spigot and protector onto the opposite end of the rod. Make sure the sleeve spigot locates correctly into the front wheel spindle.

7. Install the loose end cap and secure the protector to the rod.
8. Use a suitable allen wrench to counter hold the fixed end cap in place, and tighten the loose end cap to 89 lbf in (10 Nm).

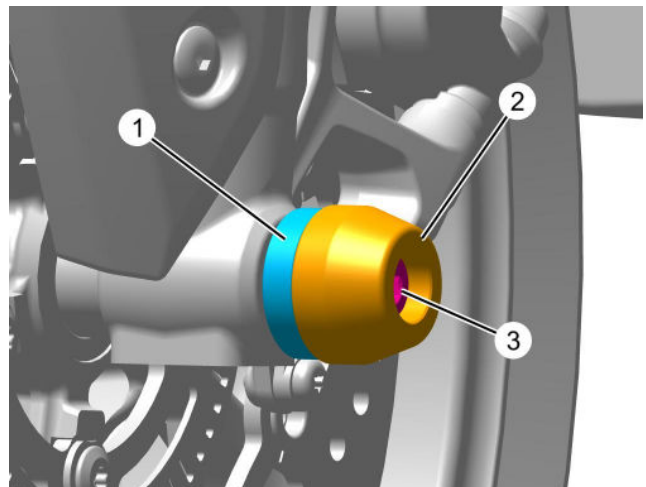

1. Sleeve, smaller diameter spigot
2. Protector
3. End cap, loose

⚠ WARNING

After fitting the accessory kit the motorcycle will exhibit new handling characteristics.

Operate the motorcycle in a safe area free from traffic to gain familiarity with any new characteristics.

Operation of the motorcycle when not familiar with any new handling characteristics may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

If, after fitting this accessory kit, you have any doubt about the performance of any aspect of the motorcycle, contact a competent person with the specialist knowledge and technical understanding of motorcycles, such as an authorized Triumph dealer.

Riding a motorcycle when there is any doubt as to any aspect of the performance of the motorcycle may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

Never ride an accessory-equipped motorcycle at speeds above 80 mph (130 km/h).

Remember that the 80 mph (130 km/h) limit will be reduced by the fitting of non-approved accessories, incorrect loading, worn tires, overall motorcycle condition and poor road or weather conditions.

The presence of accessories will cause changes in the stability and handling of the motorcycle. Failure to allow for changes in motorcycle stability may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

High-speed operation should only be attempted by riders who have been instructed in the techniques necessary for high-speed riding and are familiar with the motorcycle's characteristics in all conditions.

Only operate this Triumph motorcycle at high speed in closed-course, on-road competition or on closed-course racetracks.

High-speed operation in any other circumstances is dangerous and may lead to loss of motorcycle control which could result in serious injury or death.

NOTICE

The motorcycle must not be operated above the legal road speed limit except in closed-course conditions.