



Accessory Fitting Instructions

Thank you for choosing this Triumph genuine accessory kit. This accessory kit is the product of Triumph's use of proven engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.


Completely read all of these instructions before commencing the installation of the accessory kit in order to become thoroughly familiar with the kit's features and the installation process.

These instructions should be considered a permanent part of your accessory kit, and should remain with it even if your accessory equipped motorcycle is subsequently sold.


Flyscreen Mounting Kit	
Kit Number	Models
A9708701	Speed Twin 900 from VIN CC4121
Short Screens	
A9708381, A9708151, A9708303	Speed Twin 900 from VIN CC4121
Tall Screen	
A9708408	Speed Twin 900 from VIN CC4121

Parts supplied


A9708701

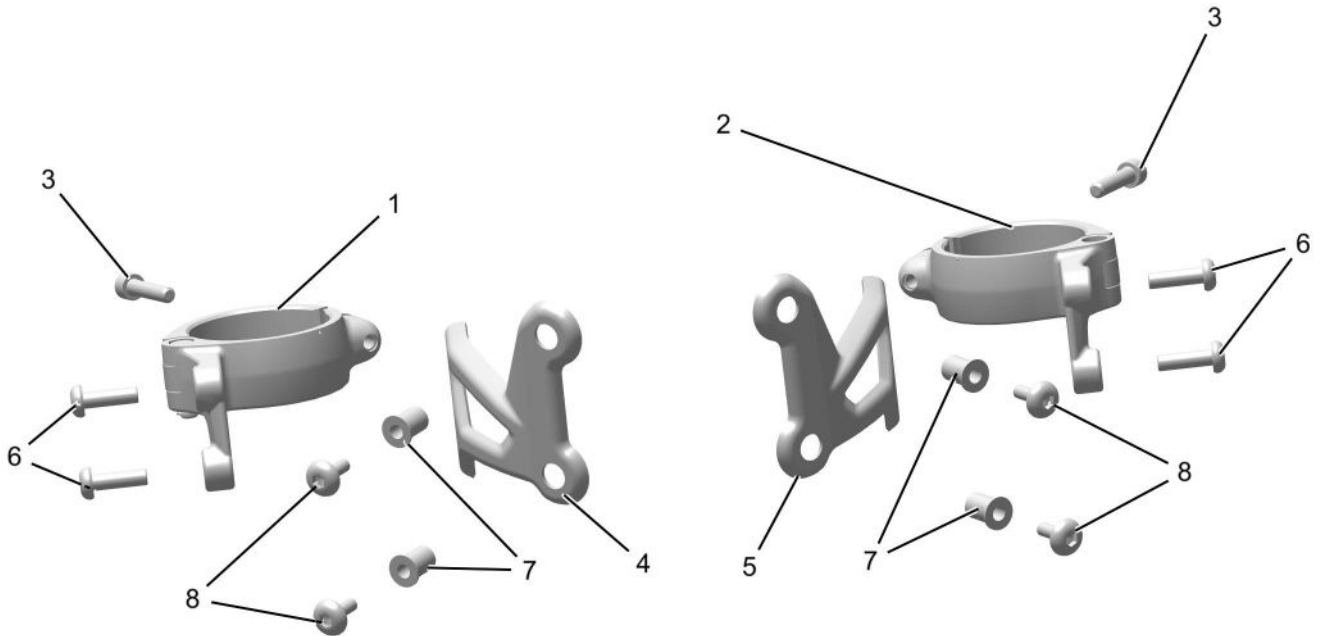

1. Clamp, right side	1 off	5. Bracket, left side	1 off
2. Clamp, left side	1 off	6. Fastener, M6 x 0.79 in (20 mm)	4 off
3. Fastener, M6 x 0.98 in (25 mm)	2 off	7. Well nut, M5	4 off
4. Bracket, right side	1 off	8. Fastener, M5 x 0.55 in (14 mm)	4 off

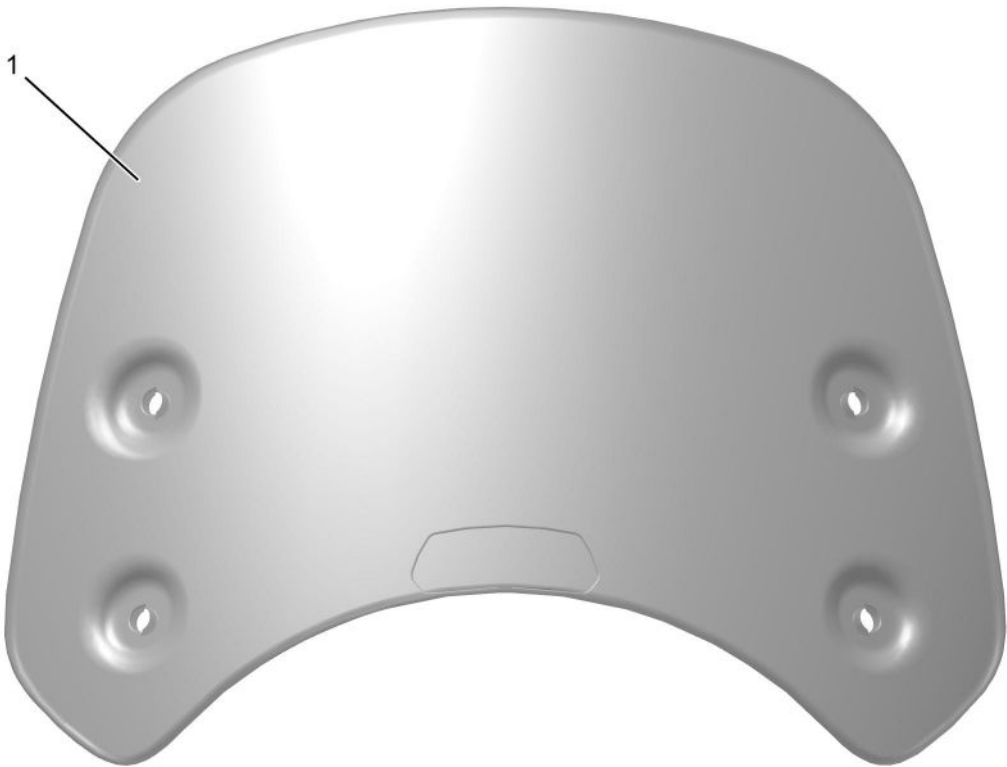

1. Flyscreen, short	1 off
---------------------	-------

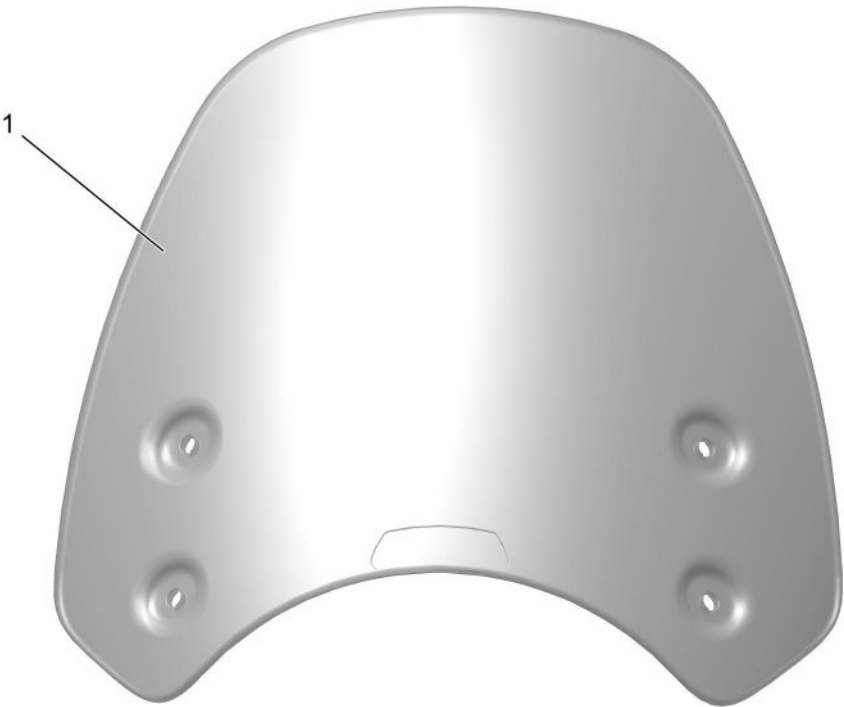

1. Flyscreen, tall	1 off
--------------------	-------

⚠ WARNING

Fit only genuine Triumph accessories to those models approved by Triumph as listed in the associated Triumph fitting instructions.

The accessory kits covered in this instruction are designed for use on specific models of Triumph motorcycle. The accessory kits and the models applicable are listed at the start of the instruction. They should never be fitted to any other Triumph model or to any other manufacturer's motorcycle.

Fitting an accessory kit to a Triumph model not listed, or to any other manufacturer's motorcycle, will affect the performance, stability and handling of the motorcycle.

Failure to follow the advice above may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

Always have Triumph approved parts, accessories and conversions fitted by a competent person with the specialist knowledge and technical understanding of motorcycles, such as an authorized Triumph dealer.

The fitment of parts, accessories and conversions by a person without the specialist knowledge and technical understanding of motorcycles may affect the handling, stability or other aspects of the motorcycle's operation.

Failure to follow the advice above may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

A torque wrench of known accurate calibration must be used when fitting this accessory kit.

Failure to tighten any of the fasteners to the correct torque specification may affect motorcycle performance, handling and stability.

Failure to follow the advice above may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

Make sure the motorcycle is stabilized and adequately supported.

Do not support the motorcycle on any ancillary component, the exhaust system or any other non structural parts of the motorcycle frame.

A correctly supported motorcycle will help prevent it from falling.

An unstable motorcycle may fall resulting in motorcycle damage, serious injury or death.

NOTICE

Triumph offers a broad range of approved genuine accessories for your motorcycle.

We cannot therefore cover all possible equipment variations in these instructions. For removal and installation of Triumph Genuine Accessories, always refer to the instructions supplied with the respective accessory kit.

To obtain additional copies of any Triumph accessory instructions, visit www.triumphinstructions.com or contact your authorized Triumph dealer.

Installing the Flyscreen Mounting kit


1. Collect the right side clamp from the kit and one of the M6 x 0.98 in (25 mm) fasteners from the kit.
2. With the hinge to the outside of the motorcycle position the bracket around the right front fork as shown below.

NOTICE

The alignment mark on some kits will be on the top of the clamp, the illustrations below show the alignment mark on the side of the clamp.


The procedure is the same in both instances.

3. Position the clamp around the fork tube and align the upper yoke split line to the alignment mark on the clamp, as shown below.

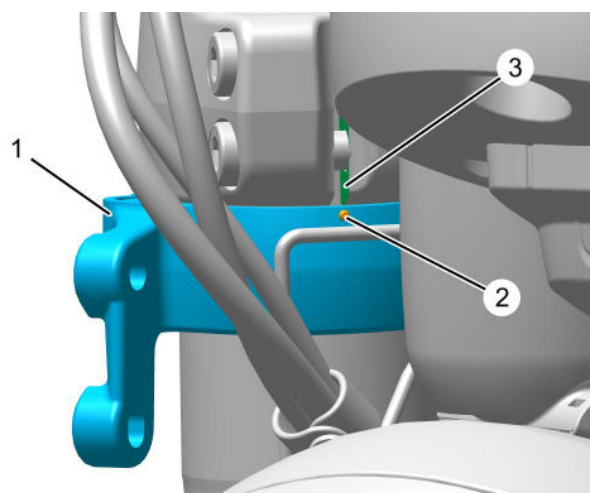


1. Clamp, right side
2. Alignment mark
3. Upper yoke split line

4. Making sure the clamp remains flush and aligned to the upper yoke, secure the screen clamp to the front fork with the M6 x 0.98 in (25 mm). Tighten to 89 lbf in (10 Nm).

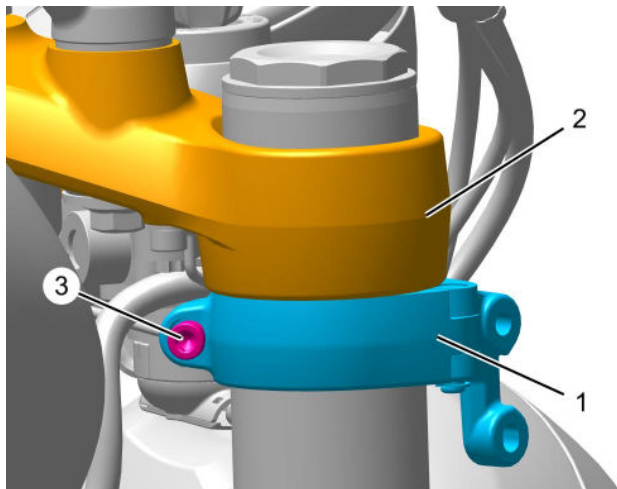

1. Clamp, right side
2. Upper yoke
3. Fastener, M6 x 0.98 in (25 mm)

5. Collect the right side bracket and two of the M6 x 0.79 in (20 mm) fasteners from the kit.
6. Secure the bracket to the clamp with the M6 x 0.79 in (20 mm) fasteners and tighten to 53 lbf in (6 Nm).

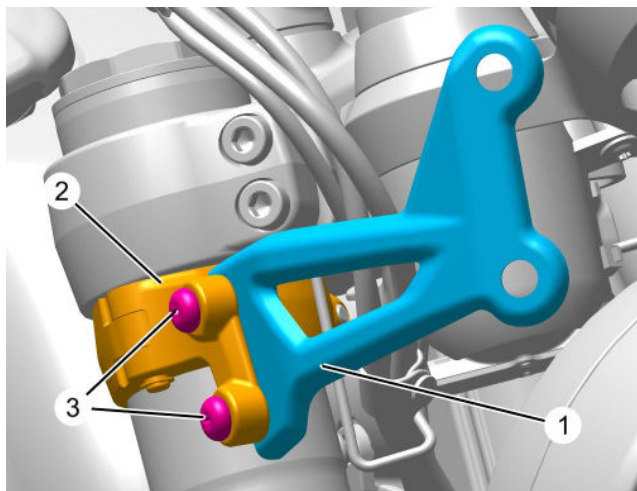


1. Bracket, right side
2. Clamp, right side
3. Fastener, M6 x 0.79 in (20 mm)

7. Collect the left side clamp from the kit and the other M6 x 0.98 in (25 mm) fasteners from the kit.


8. With the hinge to the outside of the motorcycle position the bracket around the left front fork, as shown below (instrument panel omitted for clarity).

9. Position the clamp flush against the upper yoke with the alignment mark on the clamp in line with the upper yoke split line, as shown below.

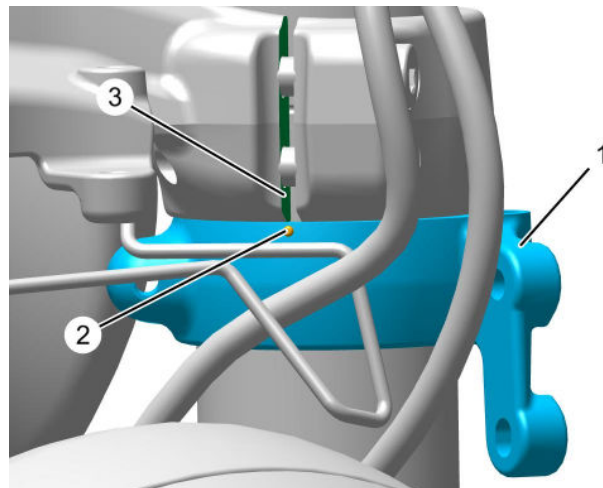

1. Clamp, left side side
2. Alignment mark
3. Upper yoke split line


10. Making sure the clamp remains flush and aligned to the upper yoke, secure the screen clamp to the front fork with the M6 x 0.98 in (25 mm). Tighten to 89 lbf in (10 Nm).

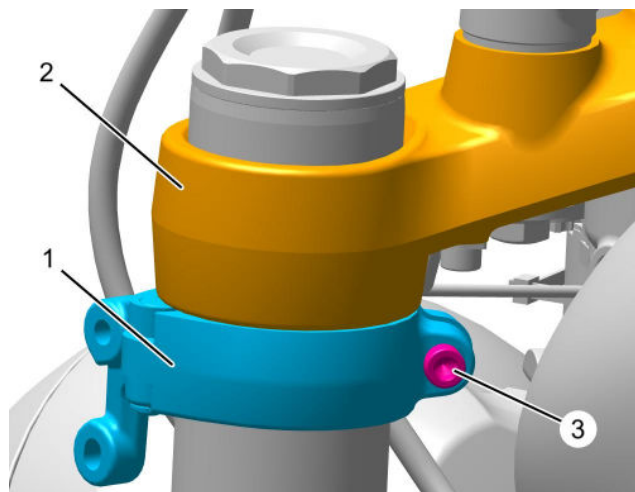

1. Clamp, left side
2. Upper yoke
3. Fastener, M6 x 0.98 in (25 mm)

11. Collect the right side bracket and the other two M6 x 0.79 in (20 mm) fasteners from the kit.


12. Secure the bracket to the clamp with the M6 x 0.79 in (20 mm) fasteners and tighten to 53 lbf in (6 Nm).

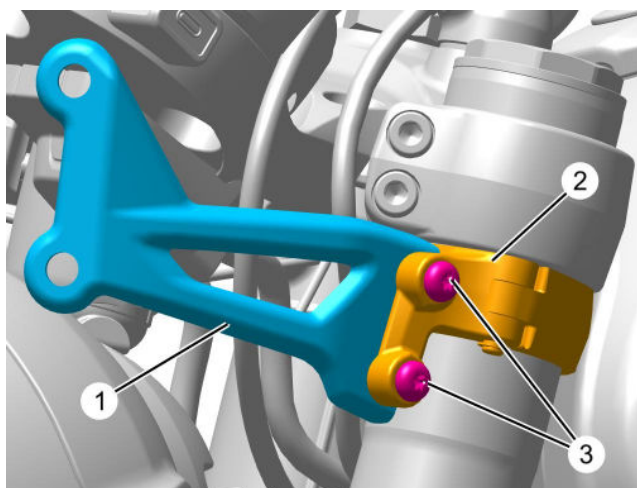

1. Bracket, left side
2. Clamp, left side
3. Fasteners, M6 x 0.79 in (20 mm)

Installing the Flyscreen

13. Collect the well nuts from the kit and mount to the brackets on both sides.

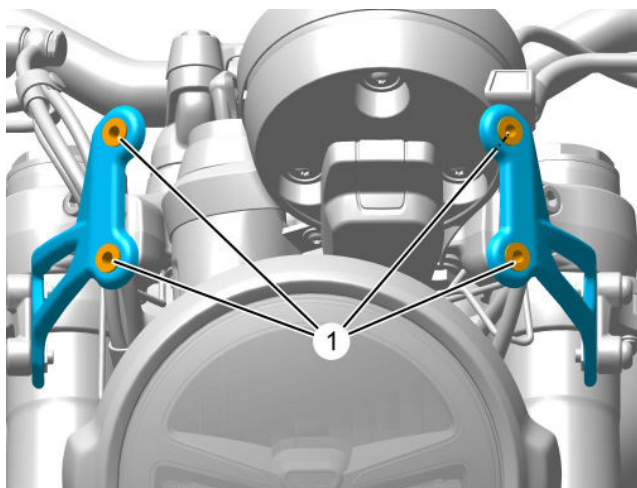

1. Well nuts


NOTICE

The procedure for mounting the screen to the brackets are the same for both the tall and the short flyscreens. The short screen is shown below.

The compatible flyscreens for this motorcycle are listed at the start of this instruction, and are sold separately.

14. Collect the flyscreen and the M5 x 0.55 in (14 mm) fasteners from the kit and position the flyscreen against the brackets.

15. Install the M5 x 0.55 in (14 mm) fasteners and tighten to 13.3 lbf in (1.5 Nm).

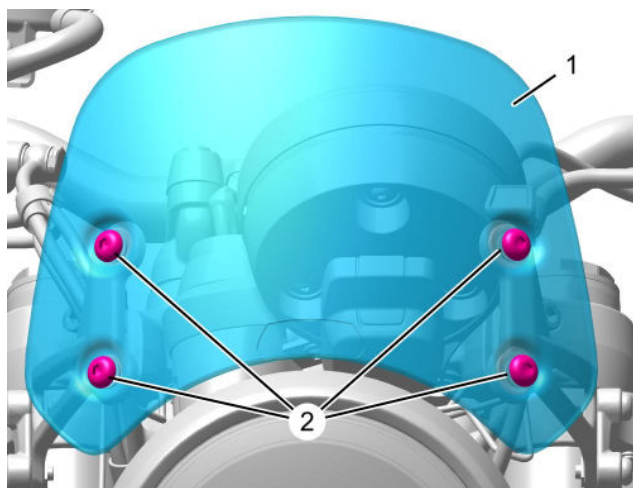

1. Flyscreen
2. Fasteners, M5 x 0.55 in (14 mm)

⚠ WARNING

After fitting the accessory kit the motorcycle will exhibit new handling characteristics.

Operate the motorcycle in a safe area free from traffic to gain familiarity with any new characteristics.

Operation of the motorcycle when not familiar with any new handling characteristics may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

If, after fitting this accessory kit, you have any doubt about the performance of any aspect of the motorcycle, contact a competent person with the specialist knowledge and technical understanding of motorcycles, such as an authorized Triumph dealer.

Riding a motorcycle when there is any doubt as to any aspect of the performance of the motorcycle may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

Never ride an accessory-equipped motorcycle at speeds above 80 mph (130 km/h).

Remember that the 80 mph (130 km/h) limit will be reduced by the fitting of non-approved accessories, incorrect loading, worn tires, overall motorcycle condition and poor road or weather conditions.

The presence of accessories will cause changes in the stability and handling of the motorcycle. Failure to allow for changes in motorcycle stability may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

High-speed operation should only be attempted by riders who have been instructed in the techniques necessary for high-speed riding and are familiar with the motorcycle's characteristics in all conditions.

Only operate this Triumph motorcycle at high speed in closed-course, on-road competition or on closed-course racetracks.

⚠ WARNING Continued

High-speed operation in any other circumstances is dangerous and may lead to loss of motorcycle control which could result in serious injury or death.

NOTICE

The motorcycle must not be operated above the legal road speed limit except in closed-course conditions.